

NEWTON AND BYWELL COMMUNITY HALL

INSTRUCTIONS FOR TURNING THE HEATING ON AND OFF

- 1. There are two controls. The left hand control is for heating the Meeting Room. The right hand control is for heating the Main Hall.**
- 2. To switch on the heating press the large white switch to position ON. To confirm the heating is on a **GREEN** light appears just under the switch mechanism.**
- 3. The boiler will now run and the radiators in the chosen zone will heat up Thermostatic controls will bring the temperature up to 20 degrees C and hold it at that level.**

BEFORE YOU LEAVE

- 4. To switch off the heating press the large white switch to the position OFF. To confirm that it has been successful the green light under the switch mechanism will be off.**

